

## **Question/Issue**

---

(speeds and feeds) After manually setting speeds and feeds and green checking out, they go back to their original settings.

## **Answer/Solution**

---

Cause,

Speed and Feed is being effected by "Material", go to Operation Manager \Properties\Tool settings at the bottom of the windows there is a Material type there, select the "Select" button to the right and choose "None" green check mark.