

## Question / Issue

---

Part disappears when dynamically rotating in verify

## Answer / Solution

---

Cause: Combination of checking "Disable Hardware Acceleration" under "Verify Interface" - "Verify Settings" in "System Configuration" and Vista

Solution: remove check next to this option or select "Disable Hardware Acceleration" under "Screen" in "System Configuration"

